



Chapter 1 - Part List


A CPU Cooler

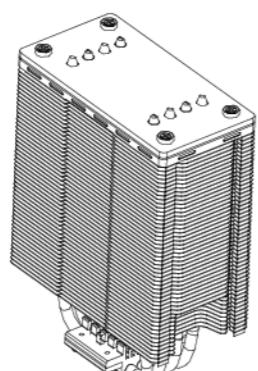

B Fan with brackets

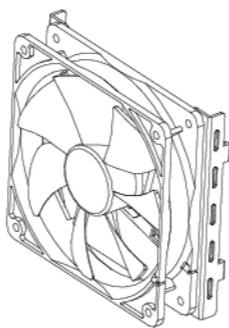

C Back Plate

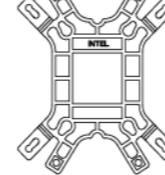

D Position Screw



E Stand-off



F Bracket Screw



G Intel Bracket



H AMD Bracket



I Fixed Screw



J Thermal Grease





CR-201 User's Manual

Chapter 2 - Intel Installation

Step 2

Step 1

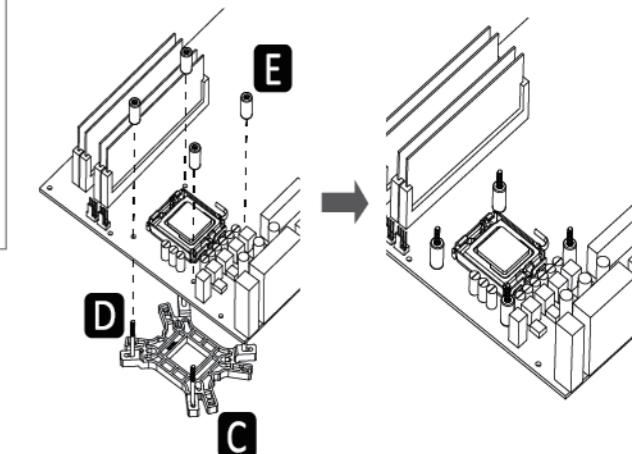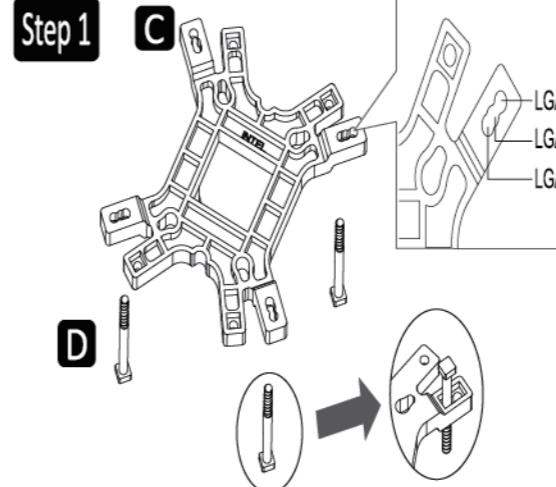


EN Insert the position screws into the proper holes on the back plate.

CN 根据系统CPU脚位将定位螺丝固定在背板相对应孔位上。

EN Install the back plate on to the back of the motherboard. Put the stand-offs into the back plate screws.

CN 将套上定位螺丝的背板，装在主板背面，再将套筒放入定位螺丝内。


Step 4

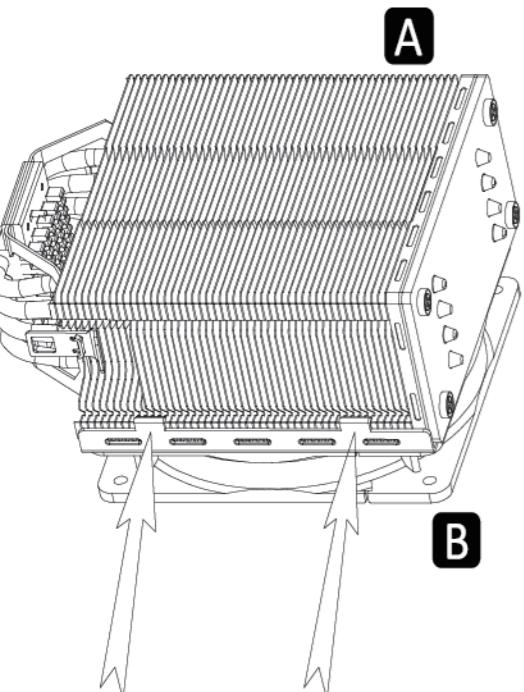

A

B


Step 5

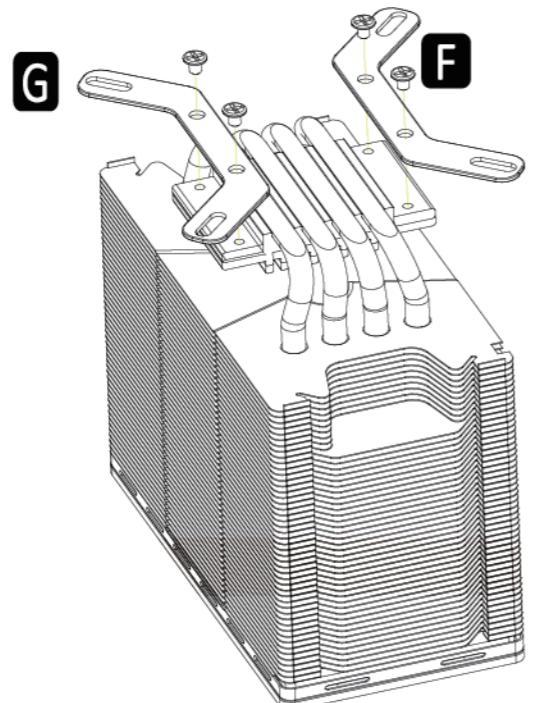

G

F

Step 6

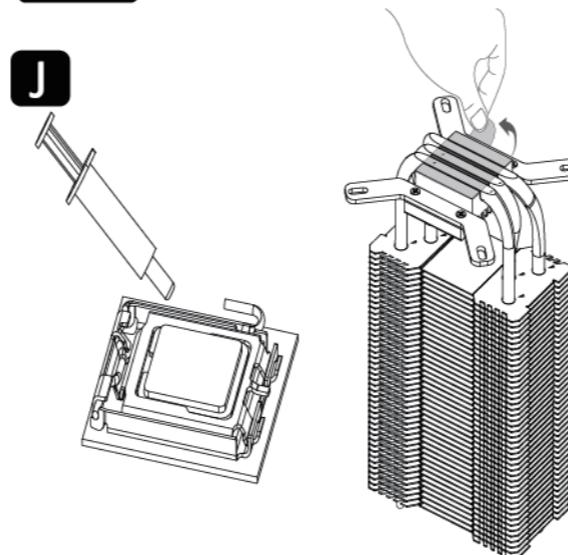


J

I



H

Step 7

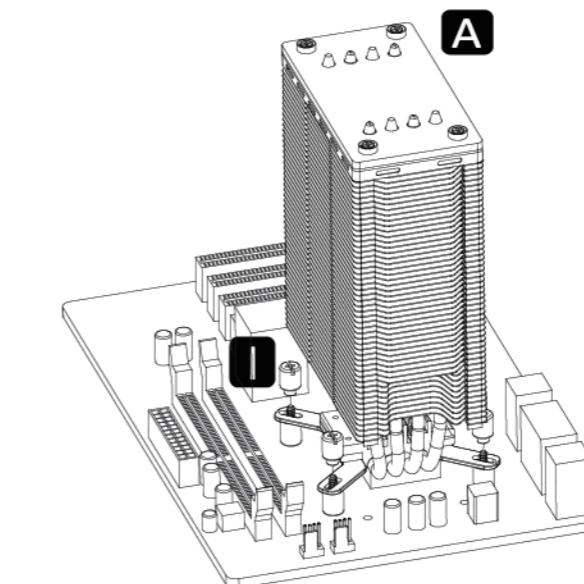


A

Step 8

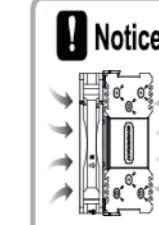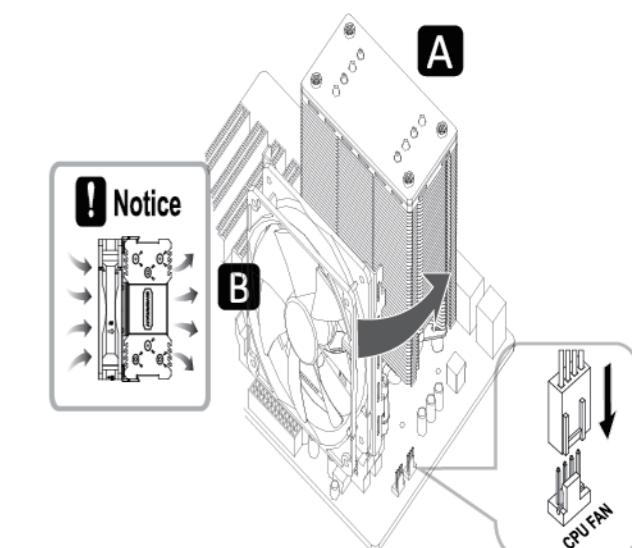

Notice

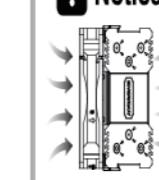

B

CPU FAN

EN Please remove the fan before installing radiator by opening those 2 buckles pointed by arrow.

CN 安装散热器前先移除风扇，用手搬开箭头指示的2个卡扣就可以取下风扇。

EN Install the bracket mount on the cooler base. Fasten the bracket mount with screws.

CN 将支架安装到散热器底座，并用支架用螺丝将其锁紧。

EN Apply the thermal grease evenly onto the CPU surface. Remove the protective film from the cooler base.

CN 将散热膏均匀地涂抹在CPU表面上，并取下散热器底座上的保护贴膜。

EN Place the cooler on the CPU and tighten the fixed screws until all four corners are secured.

CN 将散热器置于CPU上并确认四边的固定螺丝拧紧。

EN Attach the fan to the cooler with fan brackets. Connect the fan 4pin header to the CPU fan power socket on the motherboard.

CN 将风扇用风扇支架固定到散热器上，将PMW 4pin接头与主板连接。


Step 2

Step 3

Step 4


Step 5

Step 1

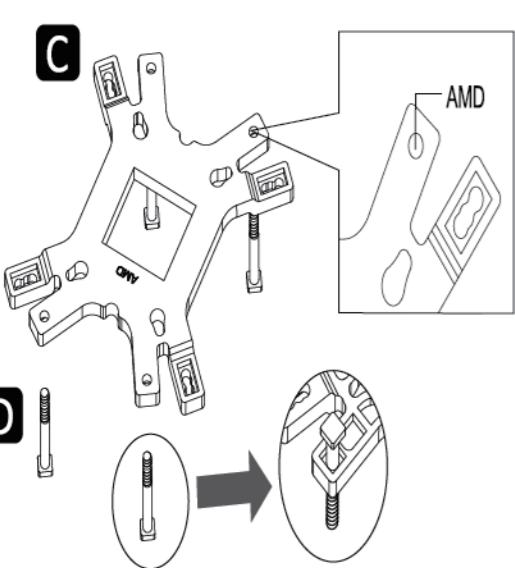


EN Insert the position screws into the AMD holes on the back plate.

CN 根据系统CPU脚位将定位螺丝固定在背板AMD相对应孔位。

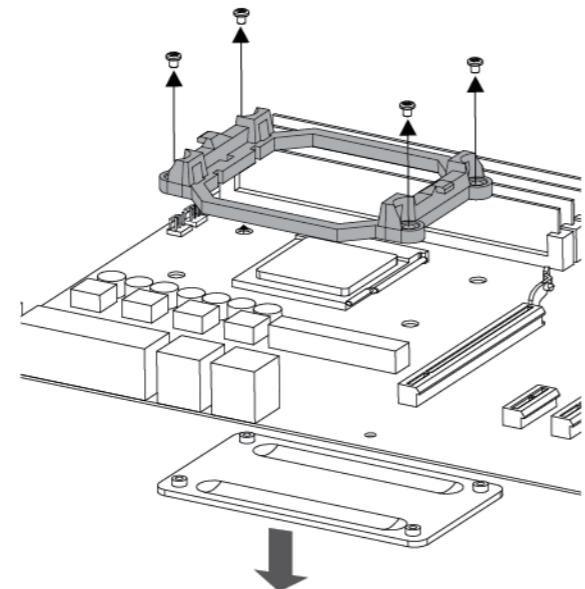


EN Please remove the original heatsink mount holder before further installation.

CN 请将AMD主板上的原厂散热支架移除。

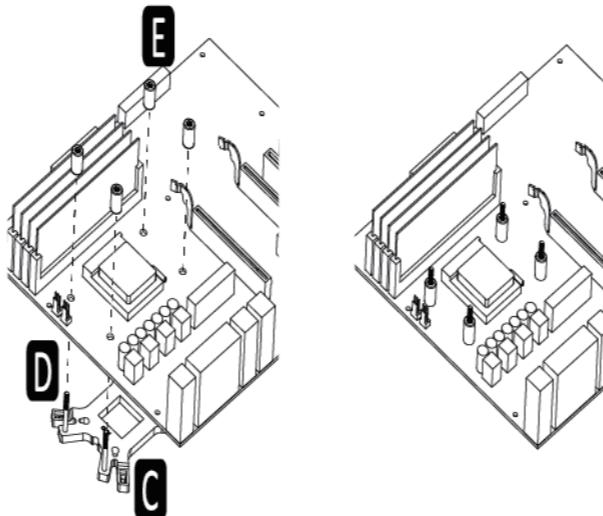


EN Install the back plate on to the back of the motherboard. Put the stand-offs into the back plate screws.

CN 将套上定位螺丝的背板，装在主板背面，再将套筒放入定位螺丝内。

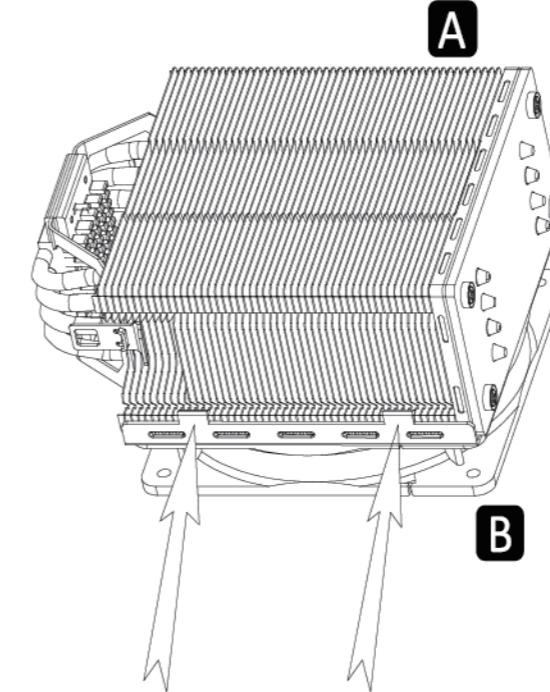

EN Please remove the fan before installing radiator by opening those 2 buckles pointed by arrow.


CN 安装散热器前先移除风扇，用手搬开箭头指示的2个卡扣就可以取下风扇。

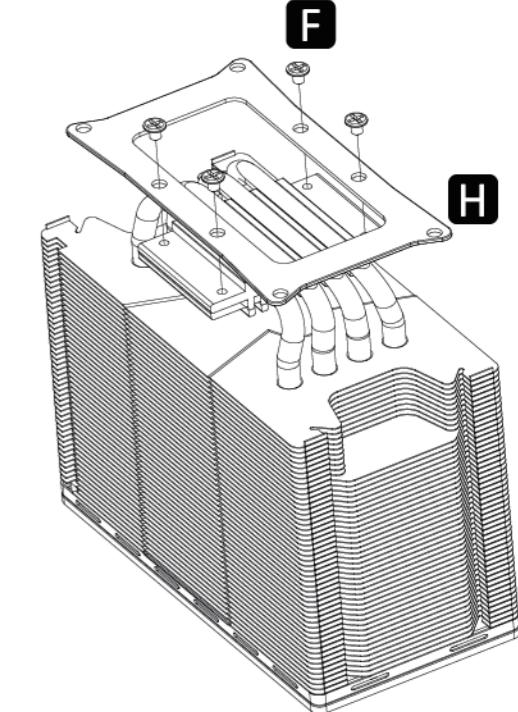

EN Install the bracket mount on the cooler base. Fasten the bracket mount with screws.

CN 将支架安装到散热器底座，并用支架用螺丝将其锁紧。


Step 6

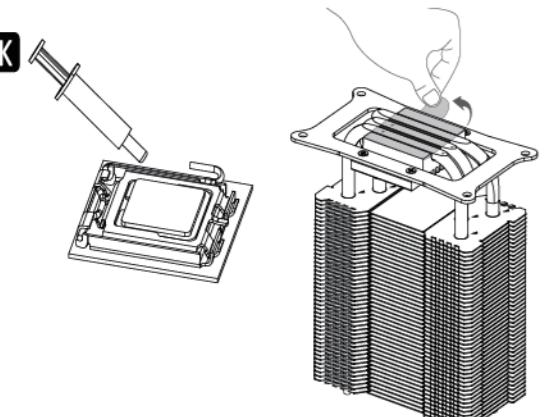

EN Apply the thermal grease evenly onto the CPU surface.
Remove the protective film from the cooler base.

CN 将散热膏均匀地涂抹在CPU表面上，并取下散热器底座上的保护贴膜。


Step 7

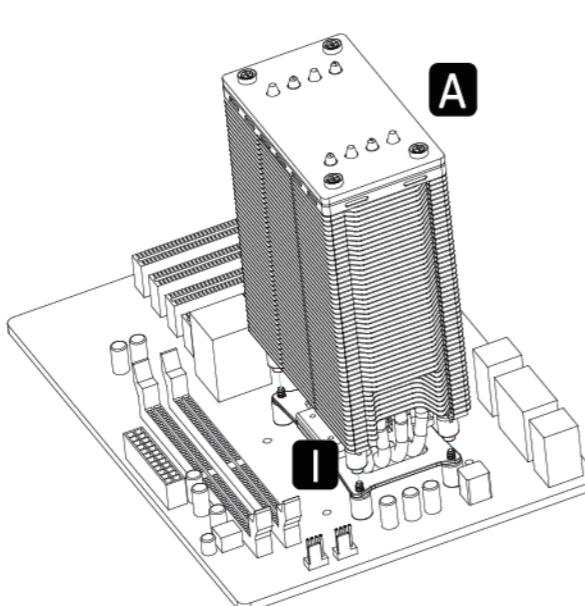

EN Place the cooler on the CPU and tighten the fixed screws until all four corners are secured.

CN 将散热器置于CPU上并确认四边的固定螺丝拧紧。


Step 8

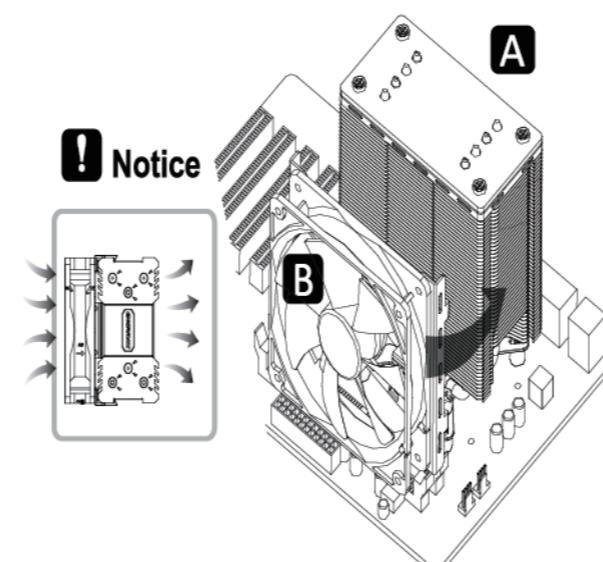

EN Attach the fan to the cooler with fan brackets.

CN 将风扇用风扇支架固定到散热器上。

Step 9

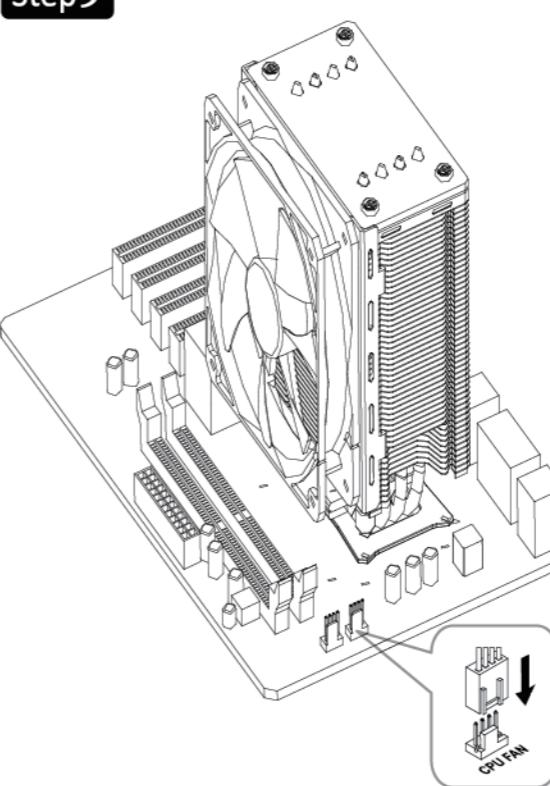

EN Connect the fan 4 pin header to the CPU fan power socket on the motherboard.

CN 将PWM 4pin接头与主板连接。

CR-201